


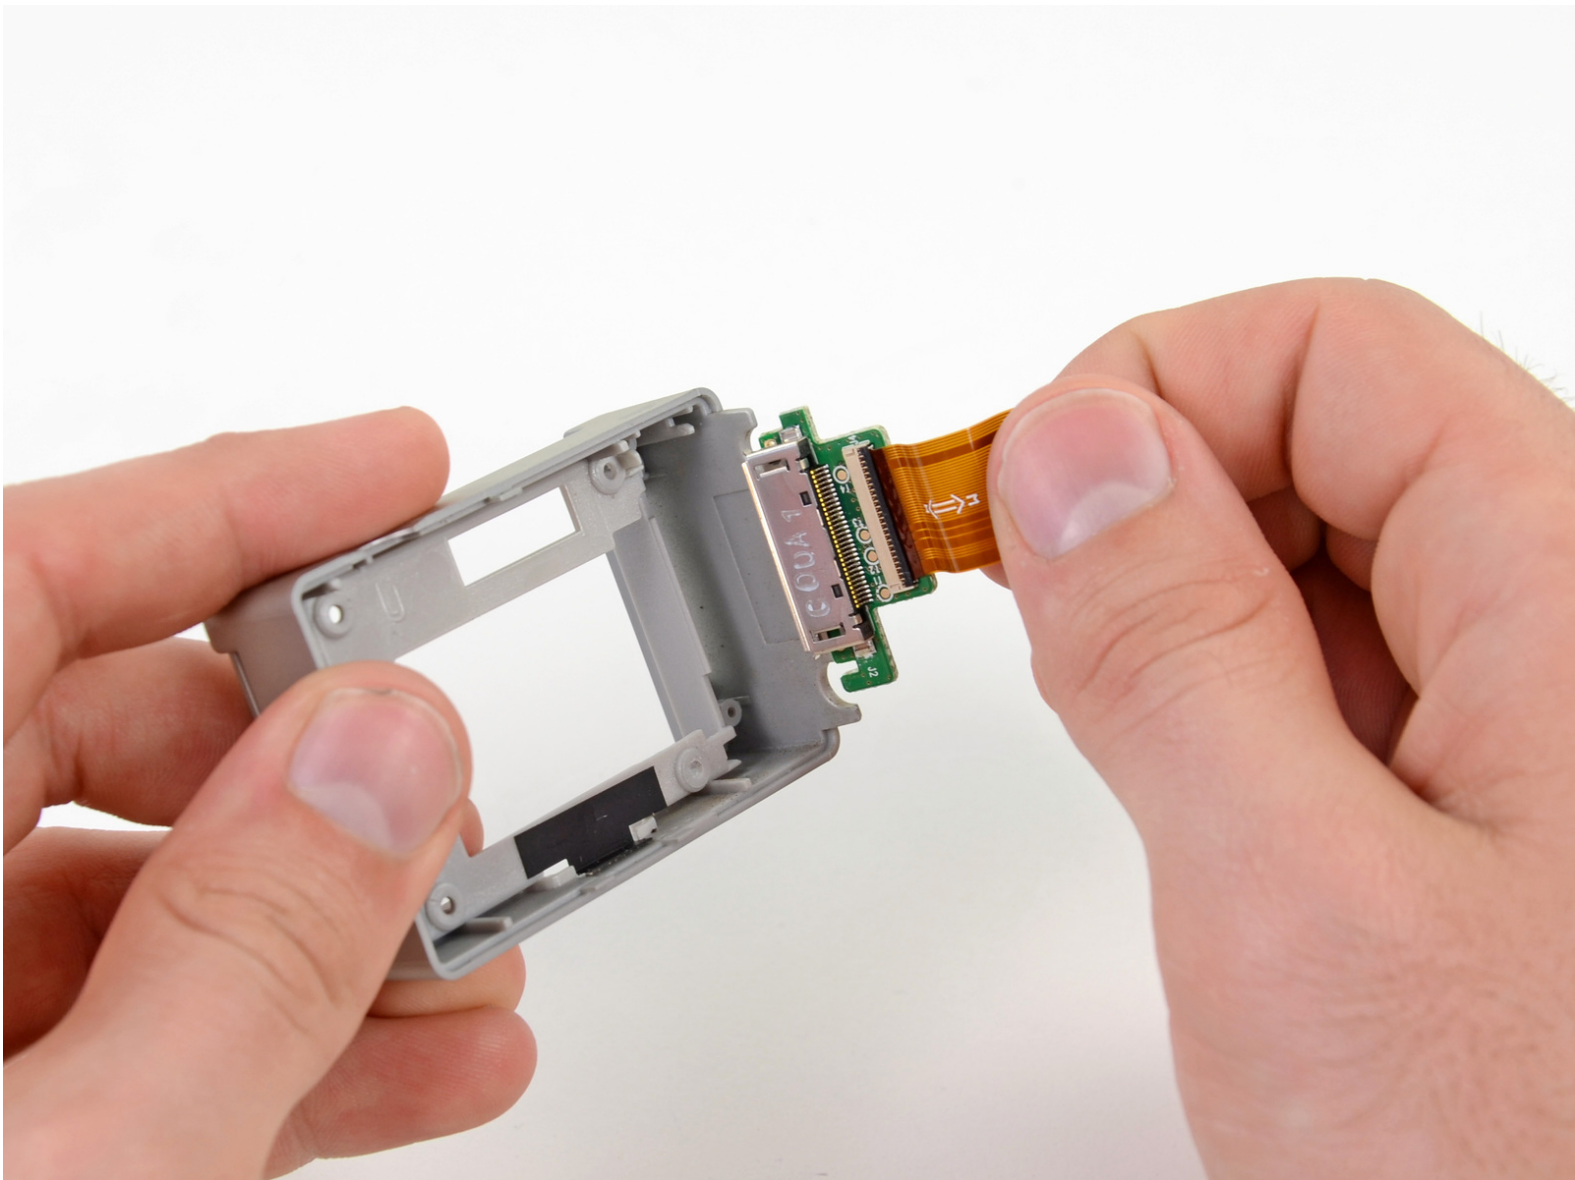

GoPro HD Hero2 SD Board Replacement

GoPro HD Hero2 SD board prerequisite.

Written By: David Hodson



INTRODUCTION


This guide is a prerequisite to removing the rear case and the SD board.



TOOLS:




- [Tweezers](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — SD Board

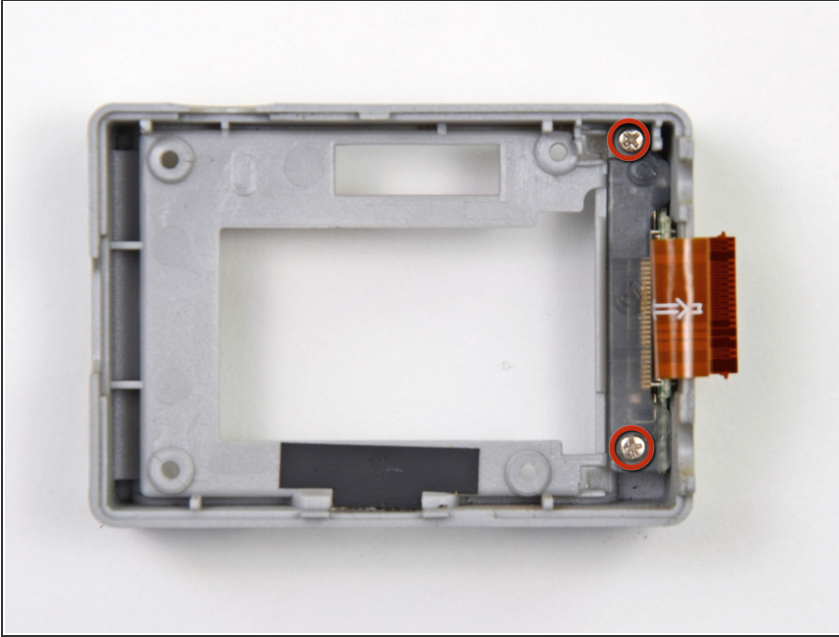



- Remove the two 5.8 mm Phillips #00 screws securing the SD board cover to the rear case.

Step 2

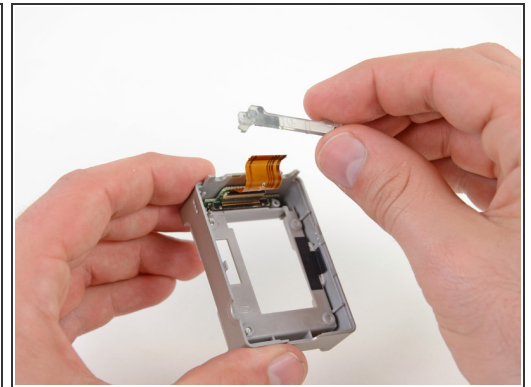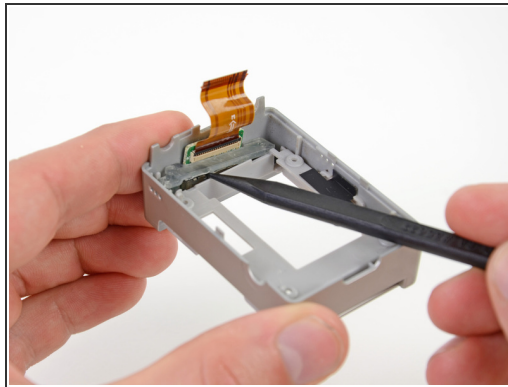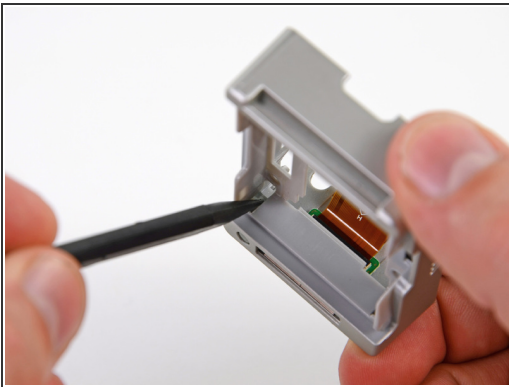

- ① Turn the rear case over so that the SD card slot is facing you.
- Use the tip of a spudger to push the bottom of the SD board cover up and out of the rear case.
- Turn the rear case back over.
- Lift the SD board cover out of the rear case with the tip of a spudger and remove it.

Step 3

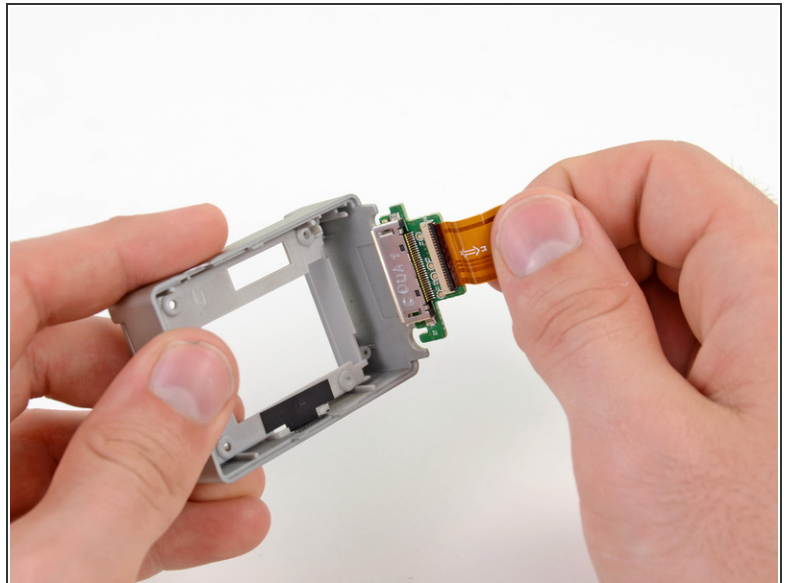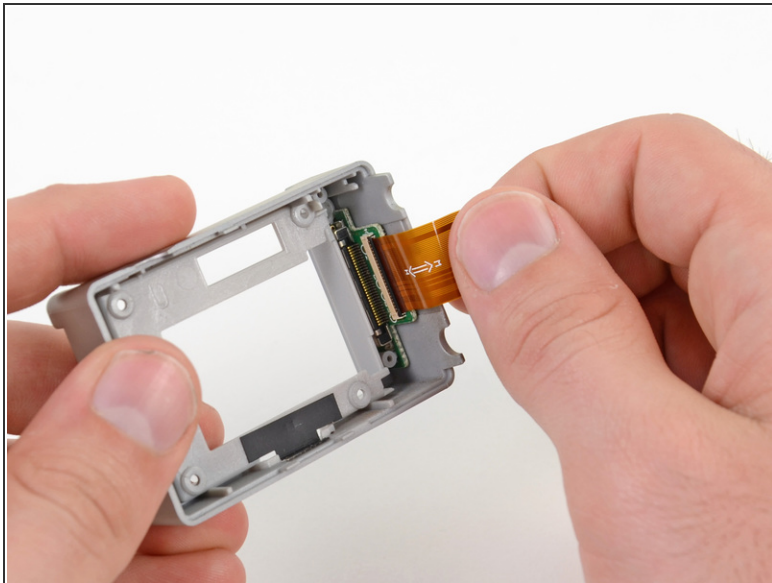

- Grasp the SD board ribbon cable gently and pull the SD board out of the rear case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-18 07:05:16 AM.